

Clutch System

Inspection

1. Check freeplay:


3/8 – 13/16 in (10 – 20 mm)

If necessary, adjust to the specified range.

Upper Adjustment

Attempt adjustment with the upper clutch cable adjuster first.

LEFT HANDLEBAR

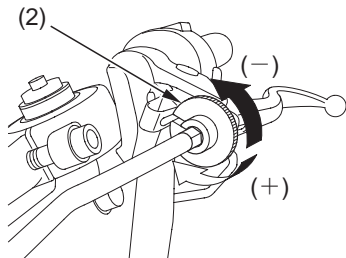

(2) upper clutch cable adjuster

(+) increase freeplay

(-) decrease freeplay

2. Turn the upper clutch cable adjuster (2) to obtain the specified freeplay.

3. Check the freeplay again.