Rear Final Gear Oil


- 6. Slowly fill the rear final gear with the recommended oil until oil start to flow out of the oil level check hole (4). Allow oil to settle for 2 3 minutes before moving to next step to prevent overfilling.

 2.9 US oz (85 cm³)
- 7. Coat a new O-ring with grease and install it into the fill cap groove and tighten it to the specified torque:
 - 9 lbf·ft (12 N·m, 1.2 kgf·m)
- 8. Install the oil level check bolt with a new sealing washer and tighten it to the specified torque:
 - 9 lbf·ft (12 N·m, 1.2 kgf·m)
- 9. Pour the drained oil into a suitable container and dispose of it in an approved manner (page 204).

NOTICE

Improper disposal of drained fluids is harmful to the environment.

REAR

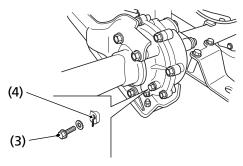

- (3) oil level check bolt
- (4) oil level check hole