




BRAKE SYSTEM

FRONT BRAKE LEVER FREE PLAY

Measure the front brake lever free play at the tip of the brake lever.

FREE PLAY: 20–30 mm (3/4–1 1/4 in)

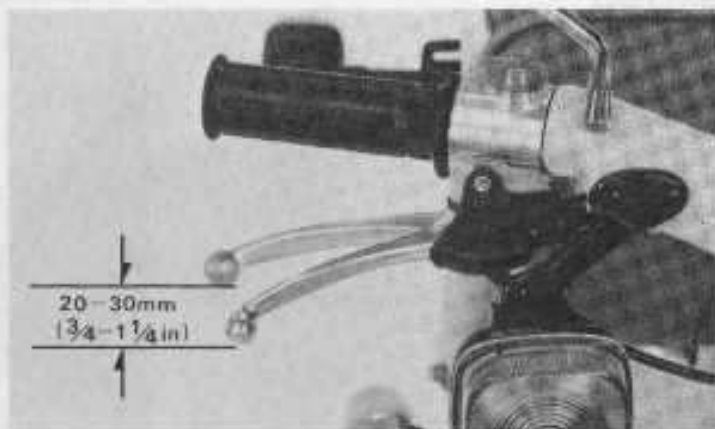

If adjustment is necessary, turn the adjusting nut until the correct free play is obtained.

NOTE

Make sure the cut-out on the adjusting nut is seated on the brake arm pin after making final free play adjustment.



ADJUSTING NUT

REAR BRAKE PEDAL FREE PLAY

Check the brake pedal free play.

FREE PLAY: 20–30 mm (3/4–1 1/4 in)

