



Raise the handlebar and remove the speedometer setting spring.


Disconnect the speedometer cable.

NOTE

Do not allow the cable nut to fall into the steering stem.

Disconnect the speedometer and indicator bulb wire connectors.

Remove the speedometer.

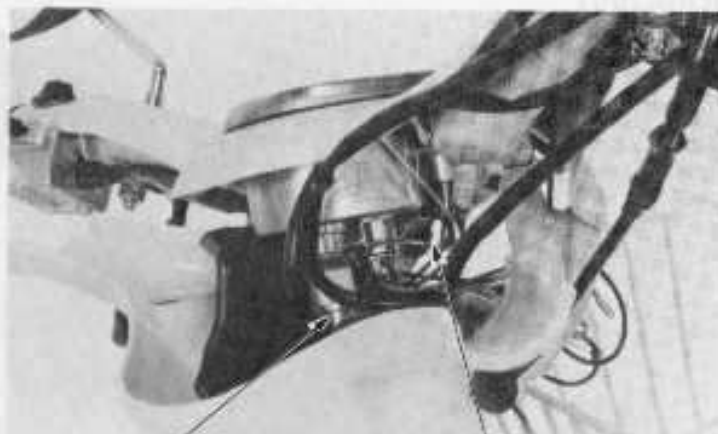

SPEEDOMETER CABLE

SETTING SPRING


Remove the bulbs.

NOTE

If a replacement bulb does not light, check the wiring for a short or open circuit, or for loose connections.

SPEEDOMETER LIGHT

HIGH BEAM INDICATOR

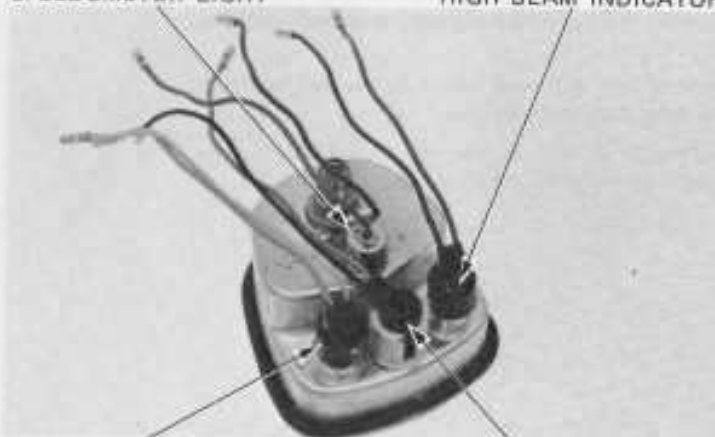

TURN SIGNAL INDICATOR

NEUTRAL INDICATOR

INSTALLATION

Install the speedometer with the setting spring.

Install the handlebar.