


## FRONT FORK/STEERING STEM

### REMOVAL

- Remove the handlebar (page 12-5).
- Remove the front wheel (page 12-8).
- Remove the shock absorbers (page 12-12).
- Remove the front fender.
- Remove the front carrier.
- Remove the front upper cover.

FRONT UPPER COVER

CARRIER

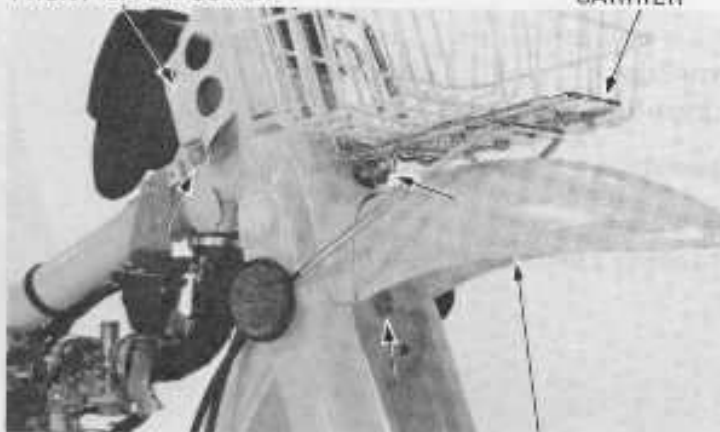

FRONT FENDER

- Disconnect the choke cable at the carburetor.
- Remove the choke knob setting screw and remove the choke cable.
- Remove the throttle, brake and speedometer cables.



CHOKE CABLE



- Remove the top bridge mounting bolts.

