




WHEEL INSPECTION

Check the rim runout by placing the wheel in a truing stand. Spin the wheel slowly and read the runout using a dial indicator.

SERVICE LIMIT:


RADIAL RUNOUT: 2.0 mm (0.08 in)

AXIAL RUNOUT: 2.0 mm (0.08 in)

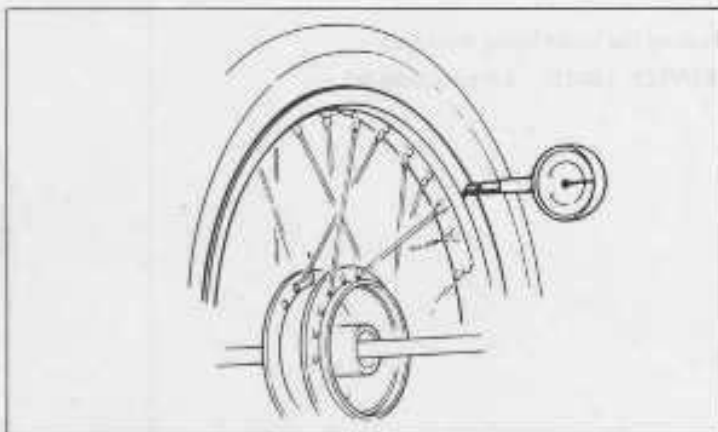

DAMPER RUBBER INSPECTION

Replace the damper rubbers if they are damaged or deteriorated.

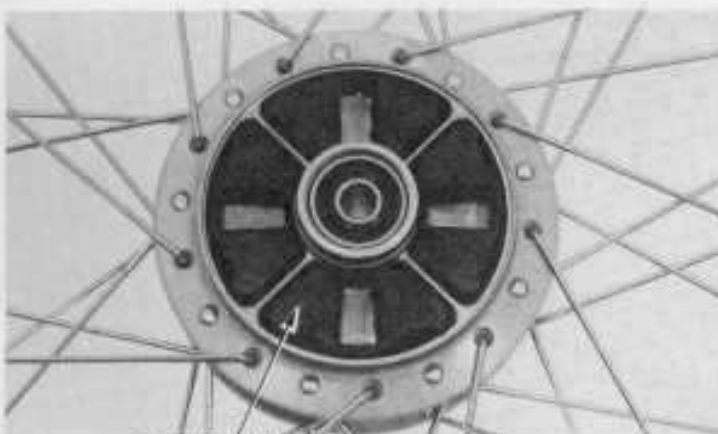

DAMPER RUBBER

BRAKE DRUM I.D. INSPECTION

Measure the brake drum inside diameter.

SERVICE LIMIT: 111 mm (4.4 in)

