



BATTERY

REMOVAL

- Remove the right side cover.
- Disconnect the ground cable at the frame.
- Disconnect the positive cable at the battery.
- Remove the battery holder plate bolt.
- Remove the battery.



TESTING SPECIFIC GRAVITY


Test each cell with a hydrometer.

SPECIFIC GRAVITY: (20°C, 68°F)

| | |
|---------------|---------------|
| 1.260 – 1.280 | Fully charged |
| Below 1.250 | Undercharged |

NOTE

- The battery must be recharged if the specific gravity is below 1.230.
- The specific gravity varies with the temperature as shown in the table.
- Replace the battery if sulfation is evident or if the space below the cell plates is filled with sediment.

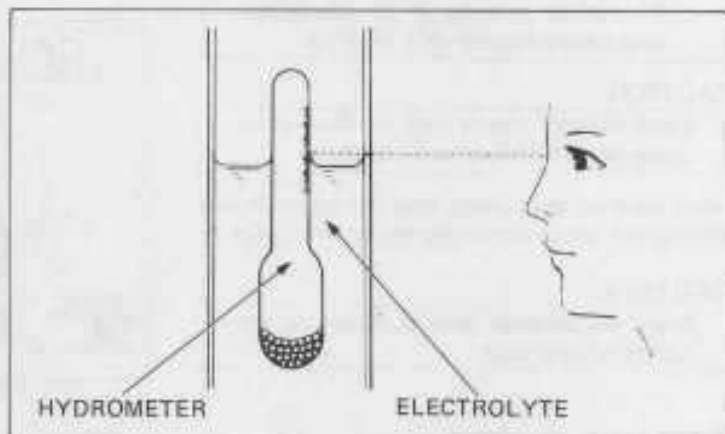

WARNING

*The battery contains sulfuric acid.
Avoid contact with skin, eyes, or clothing.
Antidote: Flush with water and get prompt
medical attention.*

