


● CAM CHAIN ADJUSTMENT

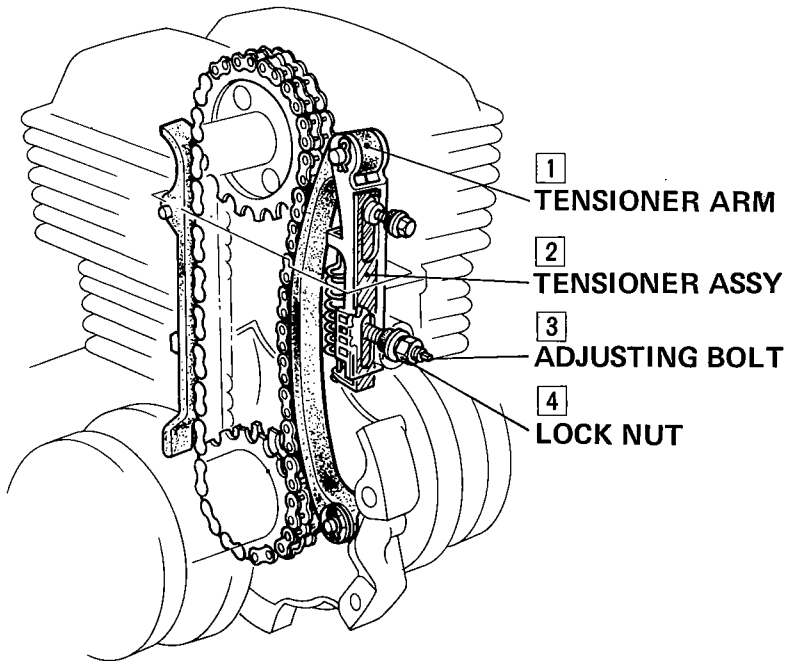


5

- (1) Stop the engine and remove the A.C. generator cover.
- (2) Rotate the generator rotor in the counterclockwise direction and align the "T1" mark on the advancer to the index mark on the L-crankcase cover.
- (3) The chain is adjusted automatically by loosening the lock nut.
- (4) After adjustment, retighten the lock nut securely.

NOTE

Hold the adjusting bolt while the lock nut is being turned.

● OIL FILTER SCREEN CLEANING

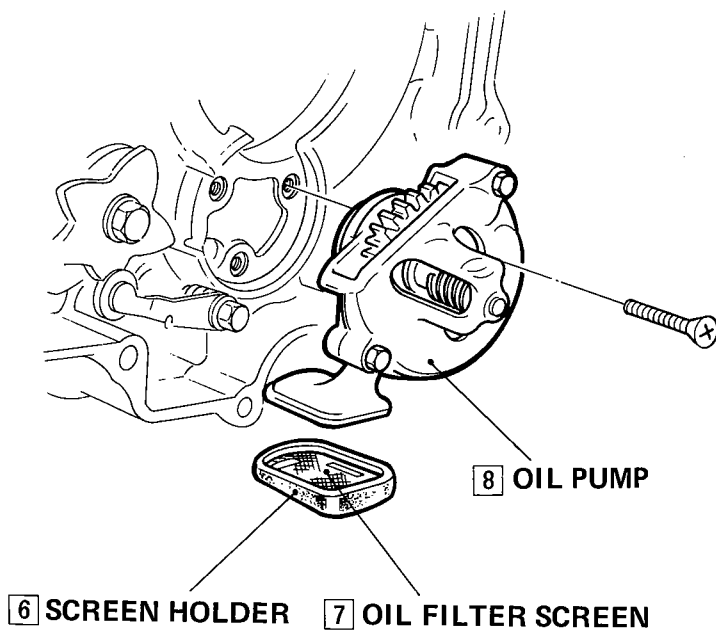

9

- (1) Remove the drain bolt to drain oil from the engine thoroughly.
- (2) Remove the kick starter pedal.
- (3) Remove the right step bar.
- (4) Remove the right exhaust muffler.
- (5) Remove the right crankcase cover.
- (6) Remove the oil pump and take out the oil filter screen.
- (7) Wash clean the filter screen in solvent.