

IX. SUPPLEMENT TO CB360T (LATE MODEL)

1. AIR CLEANER

The following shows changes of the shape and disassembly procedure only.

Disassembly

1. Open the seat and remove the right and left side covers.
2. Remove the nuts (2), and remove the air cleaner case cover.
3. Remove the air cleaner bolt and loosen 5 mm screw and remove the air cleaner element.

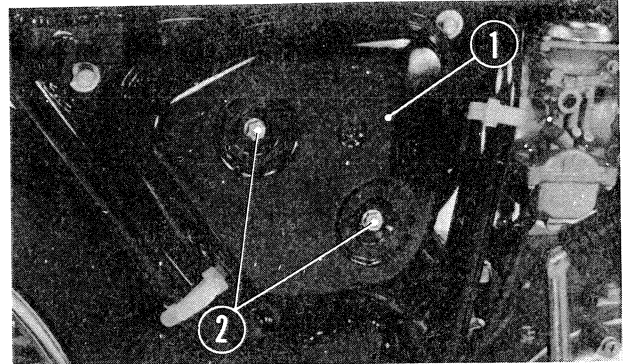


Fig. 1 (1) 6 mm nuts (2) Air cleaner case cover

4. Separate each air cleaner element from the air cleaner case.
5. Loosen the inlet tube band and remove inlet tube.

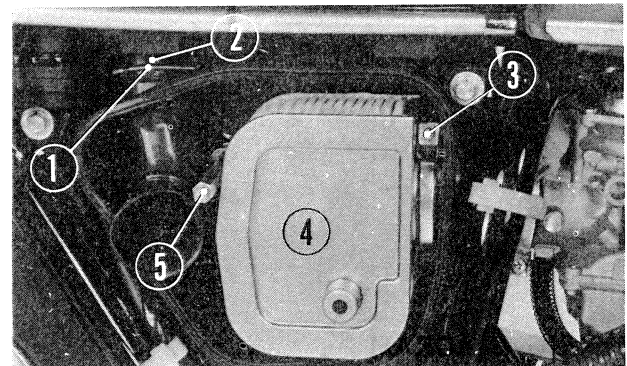


Fig. 2 (1) Inlet tube band (2) Inlet tube (3) 5 mm screw (4) Air cleaner element (5) Air cleaner bolt

6. Loosen the inlet tube band and remove inlet tube.
7. Remove the 6 mm bolts and air cleaner case.

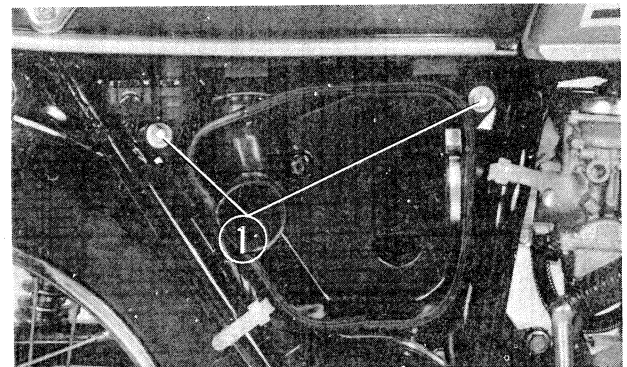


Fig. 3 (1) 6 mm bolts