


INSTALLATION


Install the fork tube into the steering stem and fork top bridge.

Align the top end of the fork tube with the upper surface of the top bridge as shown.

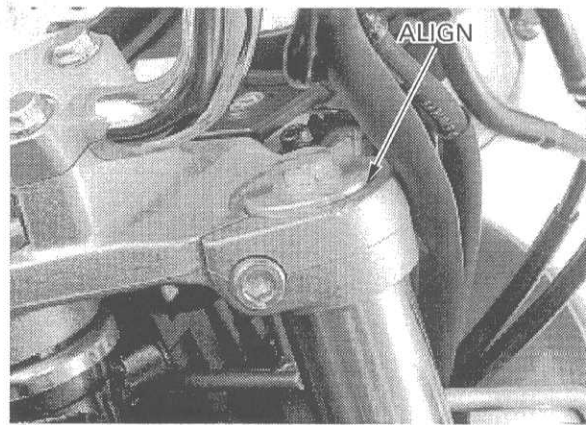


Tighten the bottom bridge pinch bolt.

TORQUE: 39 N·m (4.0 kgf·m , 29 lbf·ft)

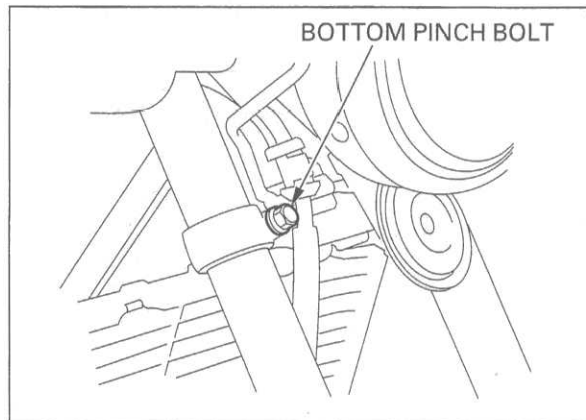

Tighten the fork cap to the specified torque if it was removed.

TORQUE: 23 N·m (2.3 kgf·m , 17 lbf·ft)

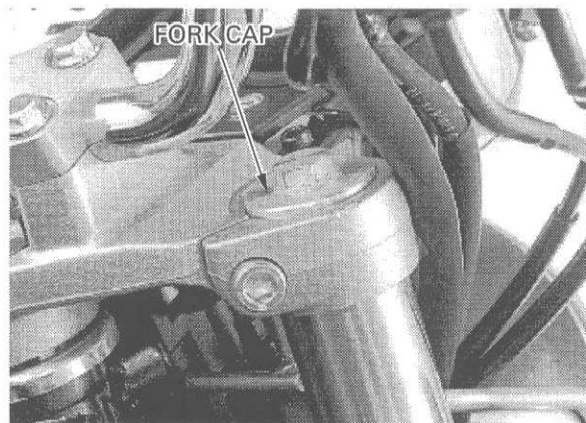

Tighten the fork top pinch bolt to the specified torque.

TORQUE: 11 N·m (1.1 kgf·m , 8 lbf·ft)

