



## FINAL DRIVE OIL


### CHECK

Place the motorcycle on its center stand on level ground.

Remove the oil filler cap.

Check that the oil level reaches the level mark in the oil filler cap hole.

Check for leaks if the level is low. Pour fresh oil through the oil filler hole until it reaches the oil level mark.

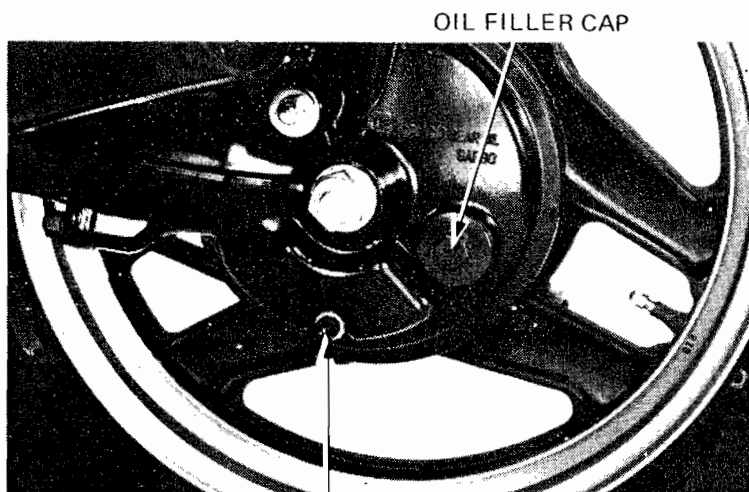

OIL DRAIN BOLT

### CHANGE


Remove the oil filler cap and drain bolt to drain all oil from the final gear case.

Install the drain bolt securely.

Fill the gear case with the recommended oil (Page 2-2) up to the correct level (above).

**OIL CAPACITY: 130 cc (4.4 oz) after draining**

Install the oil filler cap securely.

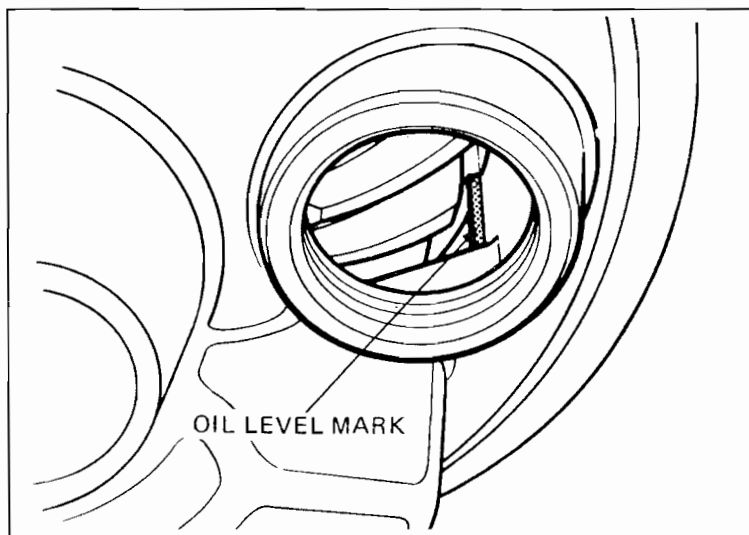

OIL LEVEL MARK

## CONTROL CABLE LUBRICATION

Periodically, disconnect the throttle cables at their upper ends. Thoroughly lubricate the cables and their pivot points with a commercially available cable lubricant or a light weight oil.