




Tap the valve stems gently with a soft hammer to firmly seat the cotters.

NOTE

Support the cylinder head above the work bench surface to prevent possible valve damage.

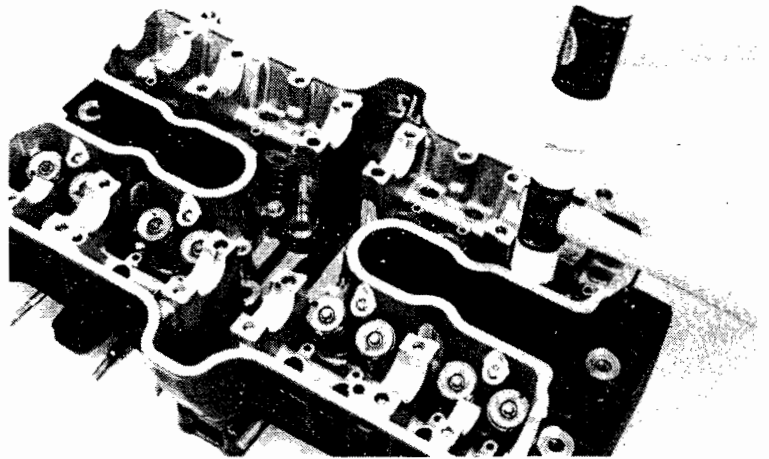


CYLINDER HEAD INSTALLATION

Clean the cylinder head surfaces of any gasket material.

Install the dowel pins and a new gasket.

Install the cam chain guide.

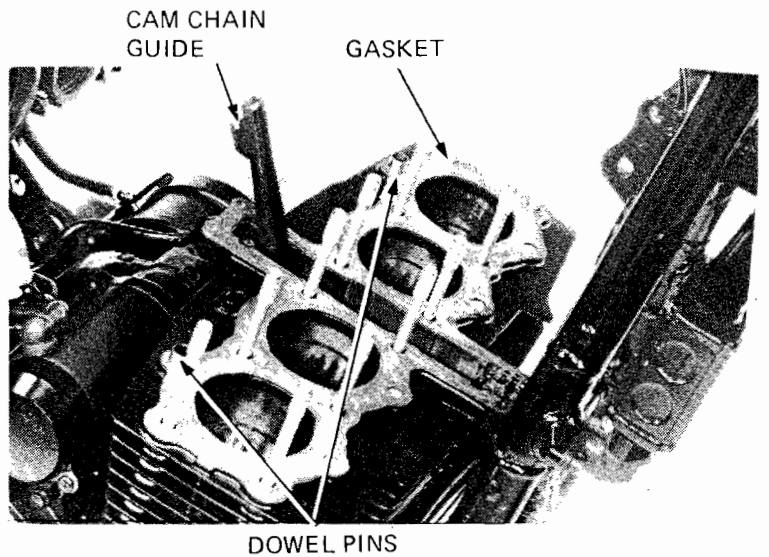

Push on the tensioner arm and lock the arm by setting the lock pin to the lock plate as shown.

