




FRONT WHEEL/SUSPENSION

Disconnect the front brake light switch wires.
Remove the right handlebar switch by removing the two screws.
Disconnect the throttle cables from the throttle grip and remove the throttle grip.

THROTTLE GRIP


RIGHT HANDLEBAR SWITCH

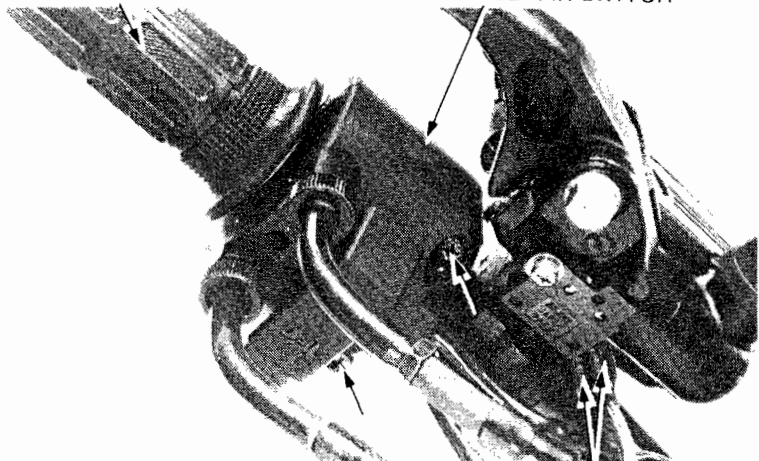


FRONT BRAKE LIGHT SWITCH WIRES

Remove the front brake master cylinder.

FRONT BRAKE MASTER CYLINDER

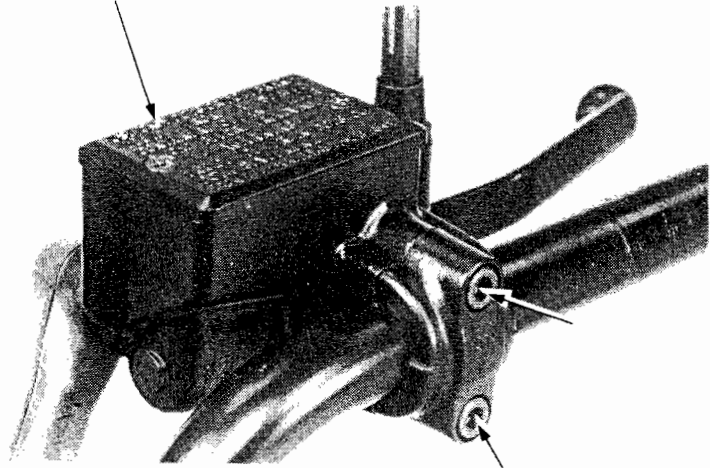

Loosen the right and left handlebar pinch bolts.
Remove the handlebar set screws and the handlebars.

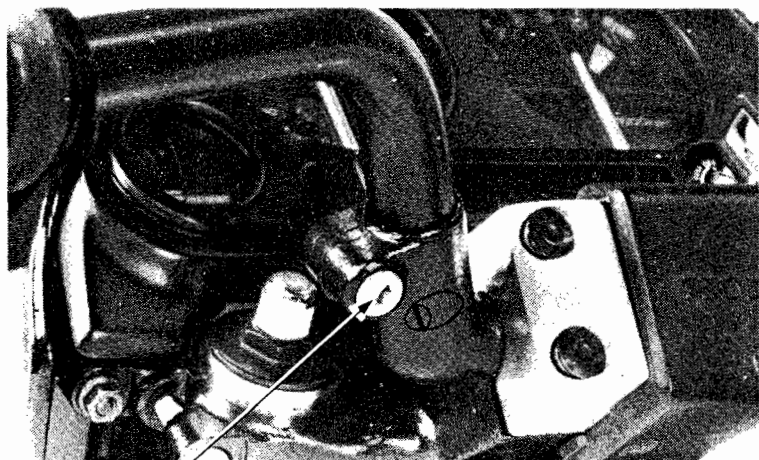

HANDLEBAR PINCH BOLT

SET SCREW