




Connect the speedometer cable to the gearbox and tighten the set screw.

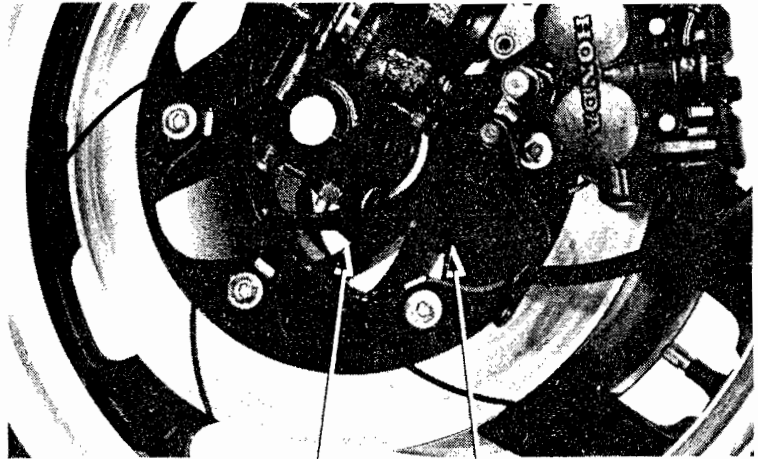


SET SCREW SPEEDOMETER CABLE

FRONT FORK

REMOVAL

Remove the front wheel (Page 14-9).
Remove the brake calipers and brackets.
Remove the fender.
Remove the fork brace.

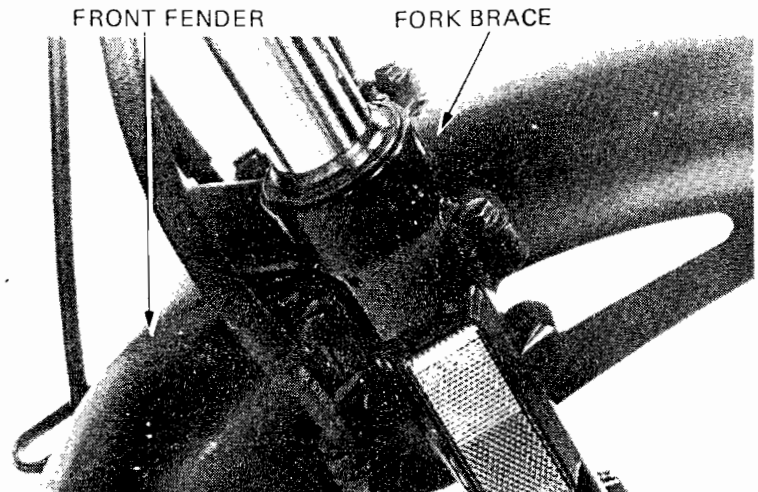

FRONT FENDER

FORK BRACE

Loosen the fork upper and lower pinch bolts.
Pull the fork tubes down and out while twisting to remove them.

