

Fig. 20-19 Full open stopper adjustment

- ① Adjuster screw
- ② Throttle lever
- ③ Full open stopper screw

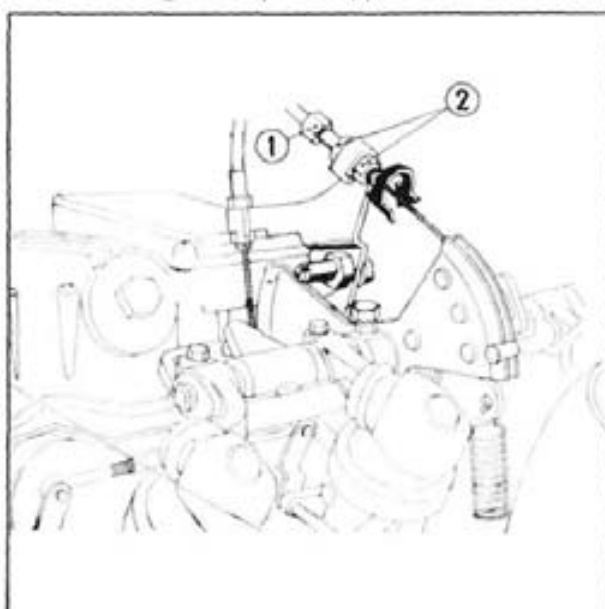


Fig. 20-20 Throttle cable adjustment

- ① Adjust nut
- ② Lock nut

Full open stopper adjustment

Adjust the stopper screw so that there will be a distance of 1.28-1.29 in. (32.5-33.0 mm) between the top and the adjuster screw with the throttle grip in the full open position. (Fig. 20-19)

Throttle cable adjustment

1. Turn the adjuster counter clockwise on the handle end to increase the play in the cable. To permit fine adjustment with the adjuster screw, leave about a 0.12 in. (3 mm) play in the cable.
2. Turn the adjuster nut at the carburetor end to provide a 0.12-0.16 in. (3-4 mm) play at the grip flange. (Fig. 20-20)

Note:

The throttle lever should hit the link pin when the grip is forced to the full close position.

If this does not occur, the throttle cable must be replaced.