



HANDLEBAR SWITCHES

Remove the headlight unit (page 19-5).

Disconnect the handlebar switch connectors.

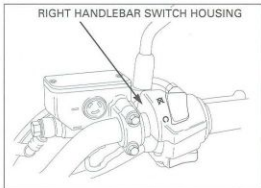

Check for continuity between the wire terminals of the handlebar switch connector. Continuity should exist between the color coded wire terminals as follows:

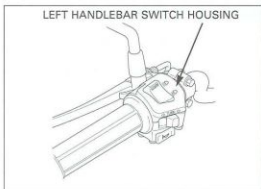

ENGINE STOP SWITCH

	IG	BAT2
OFF		
RUN	○	○
COLOR	BI	W/BI

STARTER SWITCH

	ST	IG	BAT4	HL
FREE			○	○
PUSH	○	○		
COLOR	Y/R	BI	BI/R	Bu/W

TURN SIGNAL SWITCH

	W	R	L	P	PR	PL
R	○	○		○		○
N						
L	○		○	○	○	
COLOR	GR	Lb	O	W/BI	Sb/W	O/W

PASSING SWITCH

	BAT	Hi
FREE		
PUSH	○	○
COLOR	BI/R	

DIMMER SWITCH

	HL	Lo	Hi
Lo	○	○	
(N)	○	○	○
Hi	○		○
COLOR	Bu/w	W	Bu

HORN SWITCH

	Ho	BAT
FREE		
PUSH	○	○
COLOR	Lg	BI/Br

