




ELECTRICAL SYSTEM

DTC 54-2 (BANK ANGLE SENSOR HIGH VOLTAGE)



- Bank angle sensor (Connector is connected.) →4-20

Bank Angle Sensor Diagram

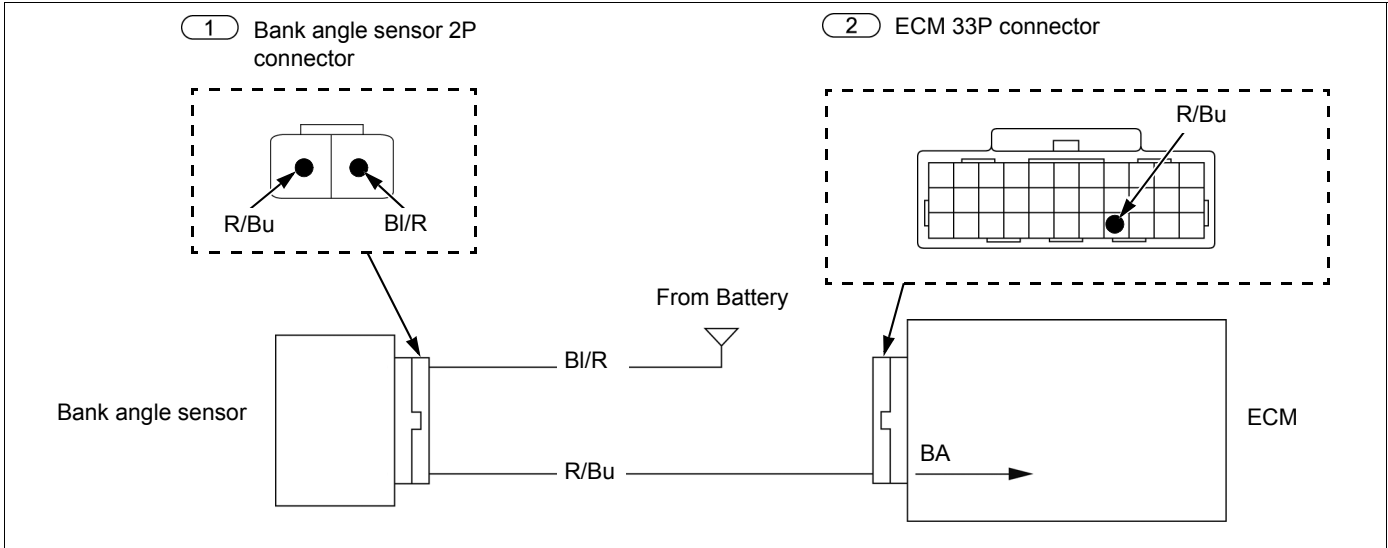

1. Bank Angle Sensor System Inspection

- Check the bank angle sensor voltage with MCS.
- Incline the bank angle sensor.
- Is the voltage decrease?

Yes
▶

- Replace the ECM with a new one →4-19, and recheck.

No ▼

- Replace the bank angle sensor with a new one →4-20, and recheck.