

## MAINTENANCE


Install the radiator/oil cooler assembly aligning the radiator grommets with the upper and lower brackets.



Install and tighten the radiator upper mounting bolt. Connect the fan motor sub-harness 2P (Natural) connector.



Install the main wire harness guide onto the left oil cooler mounting boss as shown.

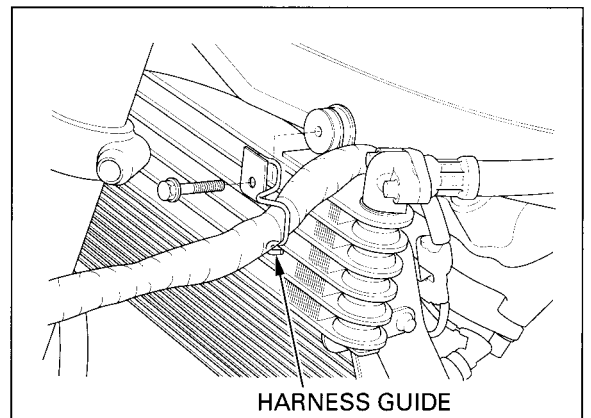

Install and tighten the oil cooler upper mounting bolts.

Install the following:

- Wing guard (page 2-14)
- Upper cowl cover/inner panel (page 2-7)
- Lower cowl (page 2-4)

