


INSPECTION

Check the piston boot, primary cup and secondary cup for fatigue or damage.

Check the master cylinder and piston for abnormal scratches.


Measure the master cylinder I.D.

SERVICE LIMIT: 17.515 mm (0.6896 in)

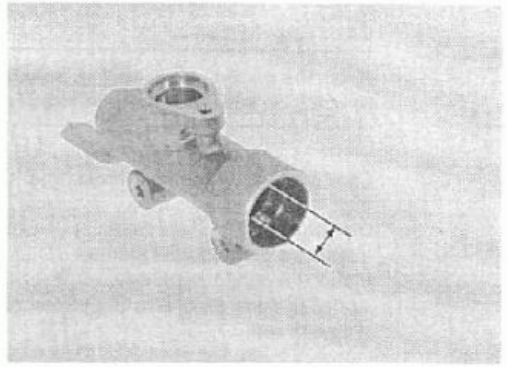

Measure the master cylinder piston O.D.

SERVICE LIMIT: 17.405 mm (0.6852 in)

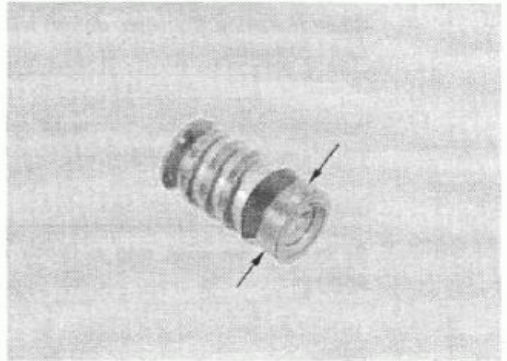**ASSEMBLY**