


CLUTCH OUTER REMOVAL

Drain the engine oil.


Remove the rear brake pedal/right foot peg bracket.

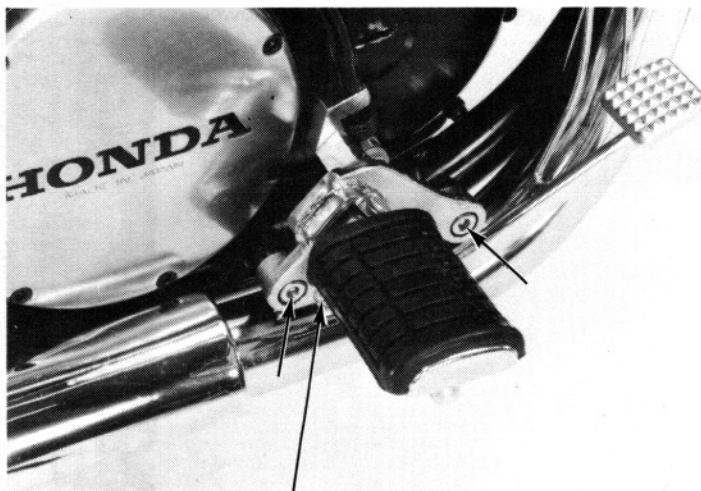

REAR BRAKE PEDAL/RIGHT FOOT PEG BRACKET

Loosen the two right exhaust pipe clamp bolts.

Remove the exhaust pipe joint nuts and remove the right exhaust pipe.

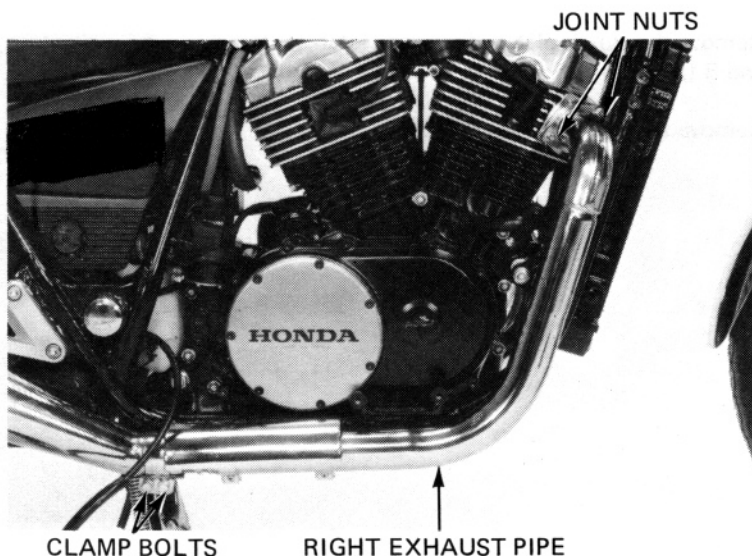

Place a jack or other adjustable support under the engine to support the engine.

Remove the four sub-frame bolts, engine mount nut and sub-frame.

