


CYLINDER HEAD/VALVE

Install the valve cotters.

CAUTION:

- *To prevent loss of tension, do not compress the valve springs more than necessary to install the valve keepers.*
- *Thread the large retainer on the compressor attachment, so the compressor will not touch the cylinder head.*

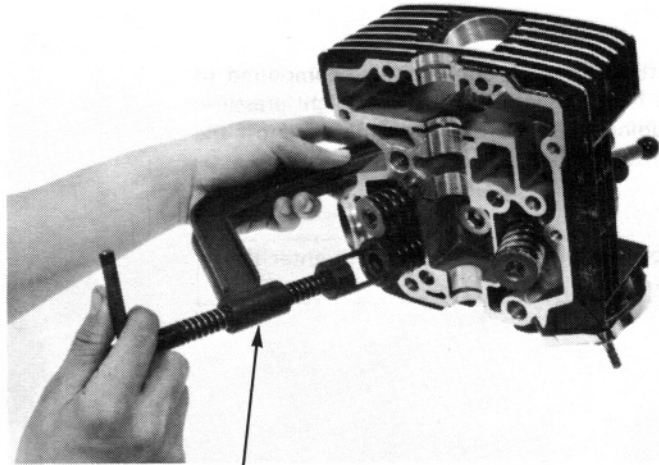


VALVE SPRING COMPRESSOR
07757-0010000 OR 07959-3290001

Tap the valve stems gently with a soft hammer to firmly seat the cotters.

NOTE:

Support the cylinder head above the work bench surface to prevent possible valve damage.

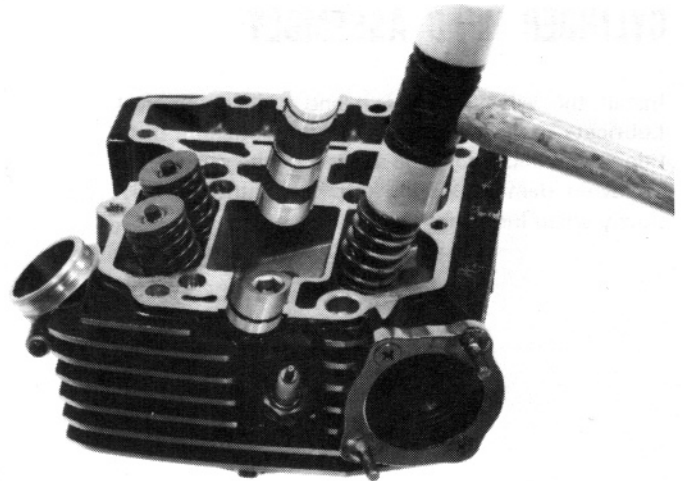

CYLINDER HEAD INSTALLATION

Make sure that the cam chain guide bosses are in the grooves of cylinder.

Clean the cylinder head surface of any gasket material.

