



Remove the 2 mm pin holding wedge A.

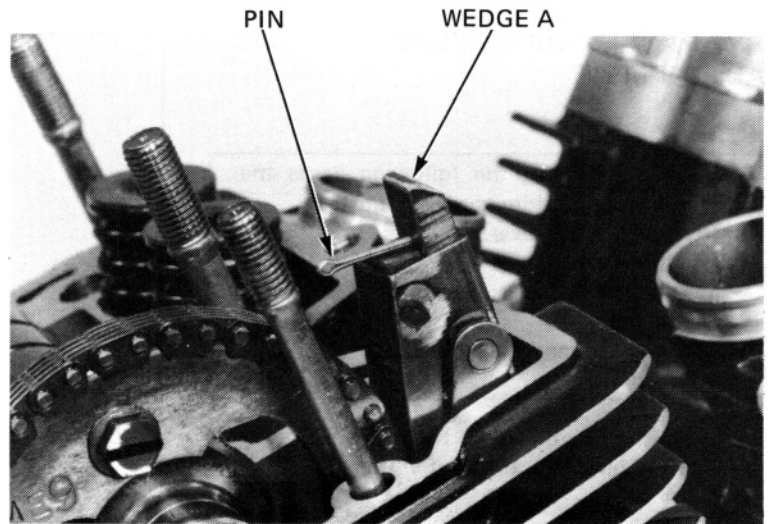

CYLINDER HEAD COVER ASSEMBLY

Brush Molybdenum Disulfide grease on the slipper surfaces of the rocker arms and coat the contact surfaces of the rocker shafts with clean engine oil.

Install the rocker arms and shafts into the cylinder head cover, making sure that the assist shaft slots are facing up.

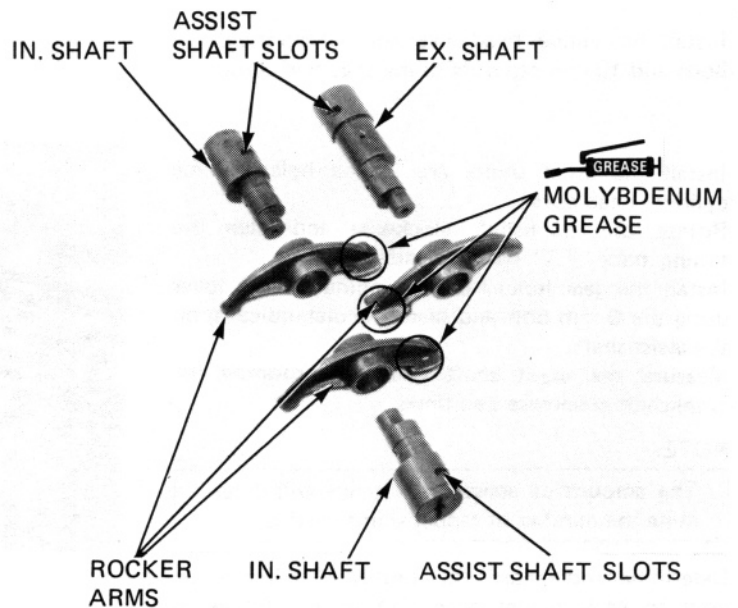

Rotate each rocker shaft so that the arms are moved in toward the center of the cover.

NOTE:

Put your finger on the rocker arms as you rotate the shaft to be sure which way the are moving.

Check that the alignment slots in the rocker shafts are within the limits shown.

NOTE:

Both intake rocker arm shafts should fall within the same limits.

