



ENGINE OIL FILTER SCREEN


NOTE

Perform this maintenance before filling the engine with oil.

Remove the skid plate and kick starter pedal.
Loosen the adjusting nut and disconnect the clutch cable at the lower end.

Remove the right foot peg.
Remove the brake pedal.

Disconnect the brake cable from the pedal.
Remove the right crankcase cover.

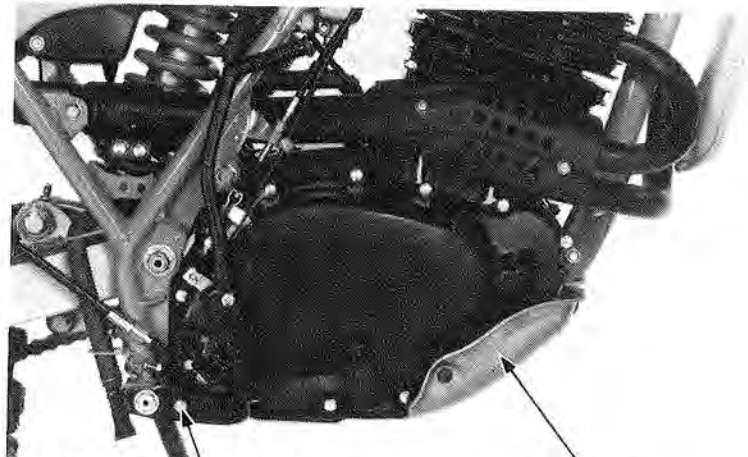

RIGHT FOOT PEG

SKID PLATE

Remove the oil filter screen and clean it.
Install the oil filter screen.


NOTE

Adjust the balancer chain while the right crankcase cover is off (Page 3-11).

Check that the right crankcase cover gasket is in good condition.
Install the removed parts in the reverse order of disassembly.

Adjust the brake pedal (Page 3-16), clutch lever (Page 3-18) and starter decompressor (Page 3-10).

Fill the crankcase with the recommended oil (Page 3-18).

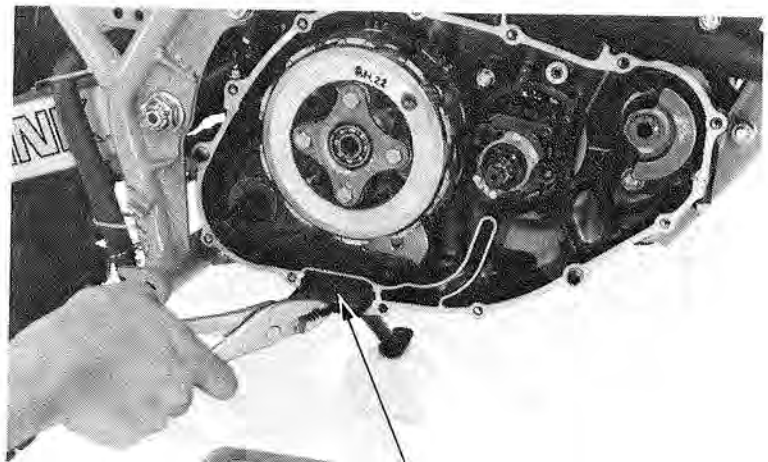

OIL FILTER SCREEN