




MAINTENANCE

Adjust as follows:
Perform minor adjustments with the upper adjuster.


Pull the cover off.
Loosen the lock nut and turn the adjuster to obtain the specified free play.
Tighten the lock nut and install the cover.

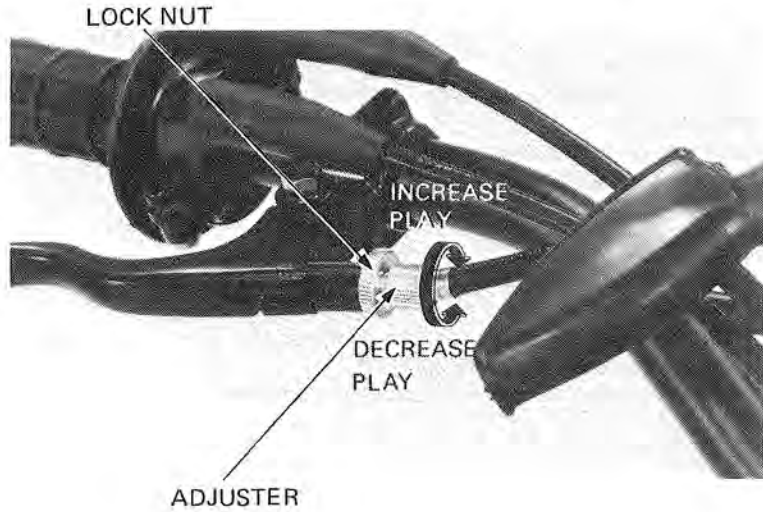

Perform major adjustments with the lower adjuster.

Loosen the bolts attaching the front brake cable guide.
Loosen the lock nut and turn the adjuster to obtain the specified free play.

Tighten the lock nut.
Retighten the brake cable guide bolts.

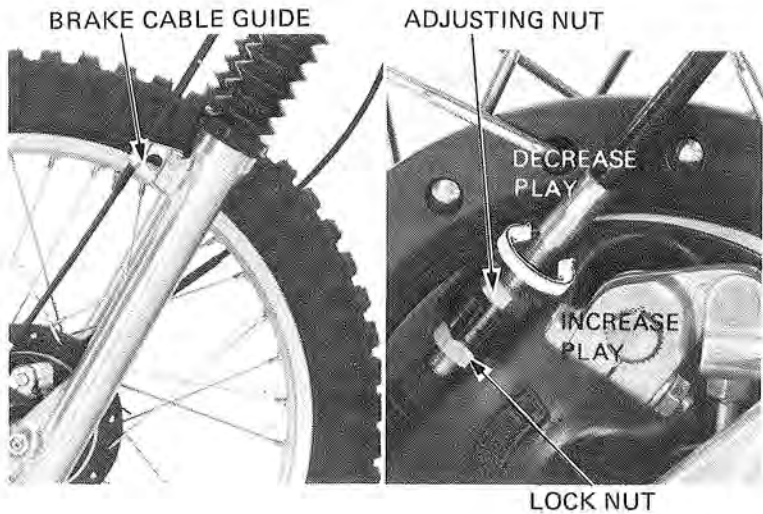

REAR BRAKE

Measure the rear brake pedal height from the footpeg.

BRAKE PEDAL HEIGHT

To adjust:
Loosen the lock nut and adjust the pedal height by turning the stopper screw. Tighten the lock nut.
Adjust the brake pedal free play.

