



Assemble the right crankcase cover components in the cover. (page 8-3, 8-4)
Install the right crankcase cover while holding the cam follower lever up.


NOTE

Check operation of the decompressor and clutch levers after installing the cover.

Tighten the right crankcase cover bolts.

TORQUE: 8–12 N·m (0.8–1.2 kg·m, 6–9 ft·lb)

Connect the decompressor cable.
Install the kick starter pedal.

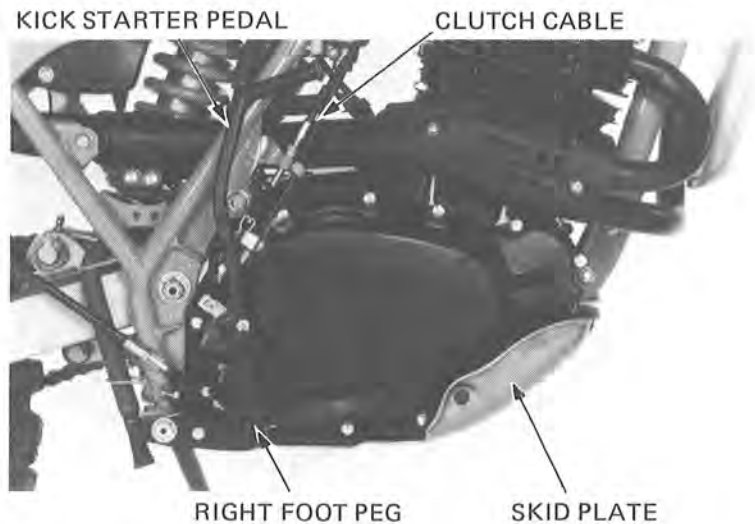

Connect the clutch cable and the rear brake cable.
Install the right foot peg and the skid plate.

Connect the pulse generator wire.
Install the fuel tank and seat.

Fill the crankcase with recommended oil up to the proper level.

Adjust the starter decompressor (Page 3-9).
Adjust the clutch free play (Page 3-18).