




## AC GENERATOR


### LEFT CRANKCASE COVER INSTALLATION

Install the stator coils into the left crankcase cover.  
Place the AC generator wire in the groove and install  
the wire clamp with the bolt.

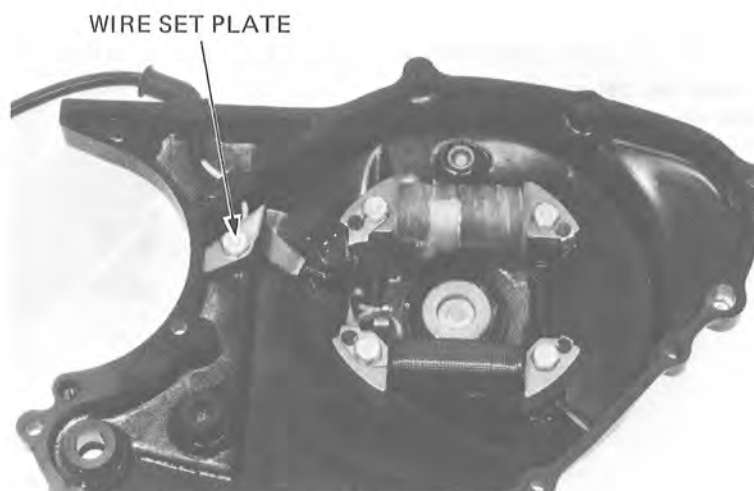

Install the dowel pins and gasket.  
Install the left crankcase cover and tighten the bolts.

**TORQUE: 8–12 N·m**  
(0.8–1.2 kg-m, 6–9 ft-lb)

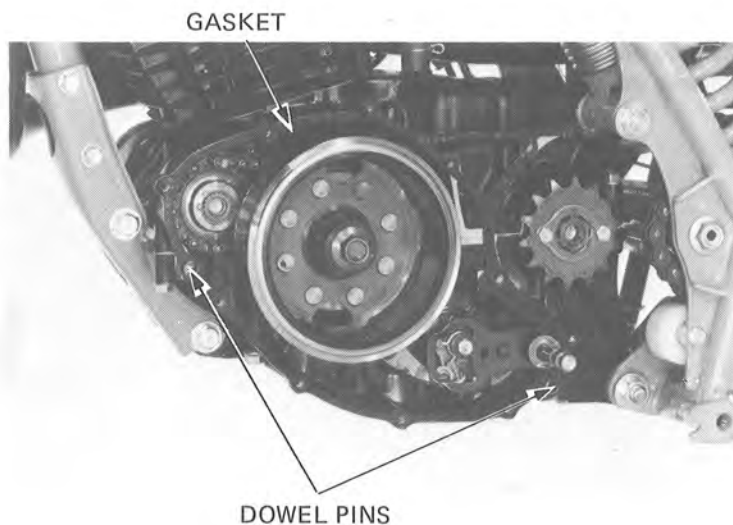

Connect and route the wires.  
Install the wire harness band.  
Install the drive chain (Page 3-15), skid plate and  
gearshift pedal.  
Install the gasket and cover.

