



Install the manual decompressor lever bracket. Align the punch mark on the handlebar with the split in the bracket.

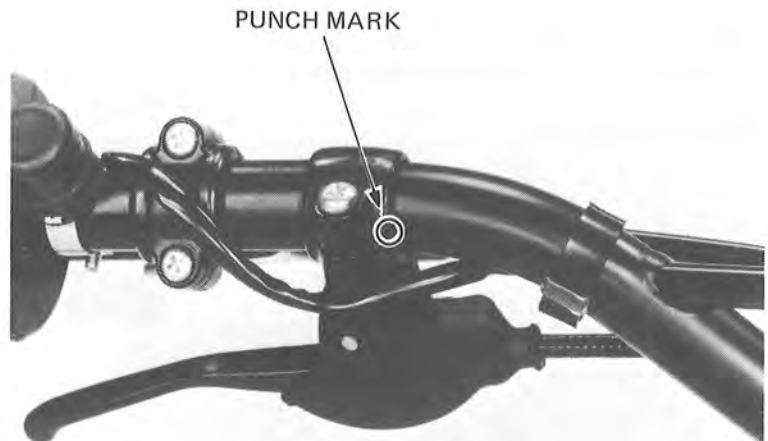

## FRONT WHEEL

### FRONT WHEEL REMOVAL

Raise the front wheel off the ground by placing a block or safety stand under the engine. Loosen the two bolts attaching the cable guide. Disconnect the front brake cable from the brake arm.

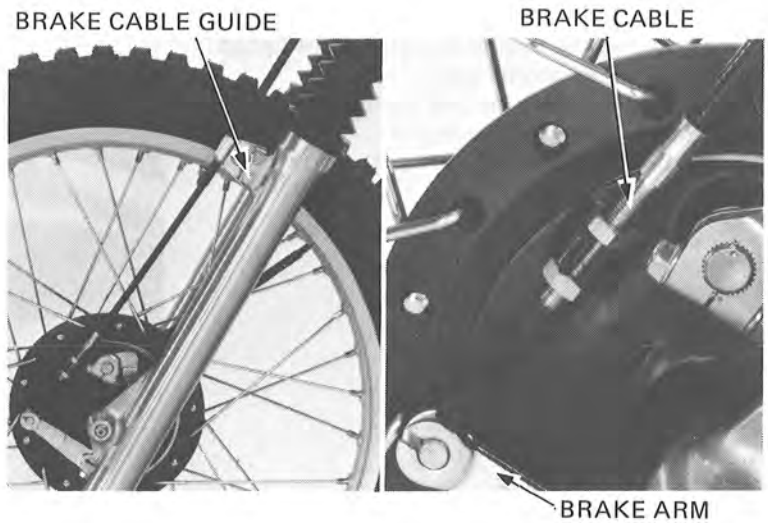

Disconnect the speedometer cable from the speedometer gearbox.

