




Tighten the axle nut.

TORQUE: 80–110 N·m
(8–11 kg·m, 58–80 ft·lb)

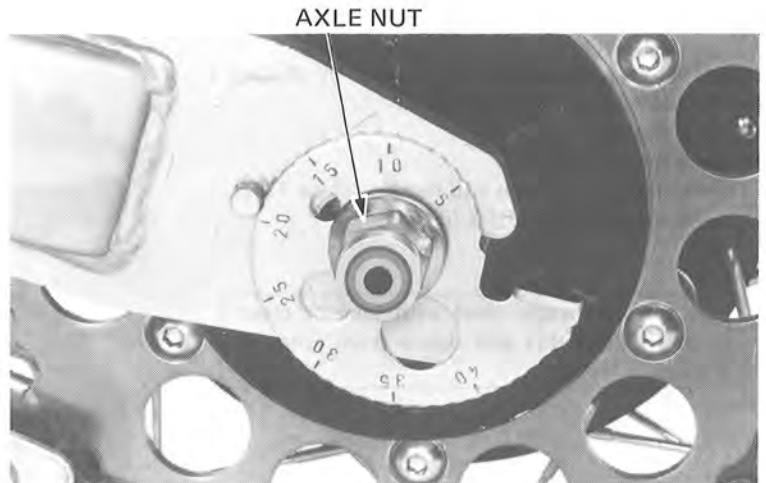

Pull the brake arm pin holder and brake arm forward and insert the brake cable into the pin. Adjust the brake pedal free play. (Page 3-16)

