


2. Make the adjustment of pedal tip travel with the brake rod adjusting nut. Turn clockwise for less free travel, counter-clockwise for greater free travel. The nominal free play is 0.4-0.8 (10-20 mm).

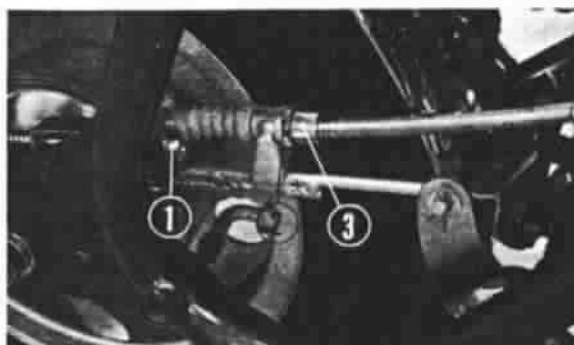

① Brake rod adjusting nut ② Circular lock nut
③ Brake cable adjusting nut
Fig. 59

3. The light should come on when the brake pedal is depressed 0.4 (10 mm). Turning the adjuster nut clockwise will delay the switch engagement (Fig. 60).



Fig. 60 ① Adjuster nut