



BATTERY

Remove the right side cover.

Disconnect the ground cable at the frame.

Disconnect the positive cable at the battery terminal.

Remove the battery holder plate.

Remove the battery.

Inspect the battery fluid level.

When the fluid level nears the lower level, refill with distilled water to the upper level.


NOTE

Add only distilled water. Tap water will shorten the service life of the battery.

WARNING

The battery electrolyte contains sulfuric acid. Protect your eyes, skin, and clothing. In case of contact, flush thoroughly with water and contact a doctor if electrolyte gets in your eyes.

Replace the battery, if sulfation forms or sediments accumulate on the bottom.

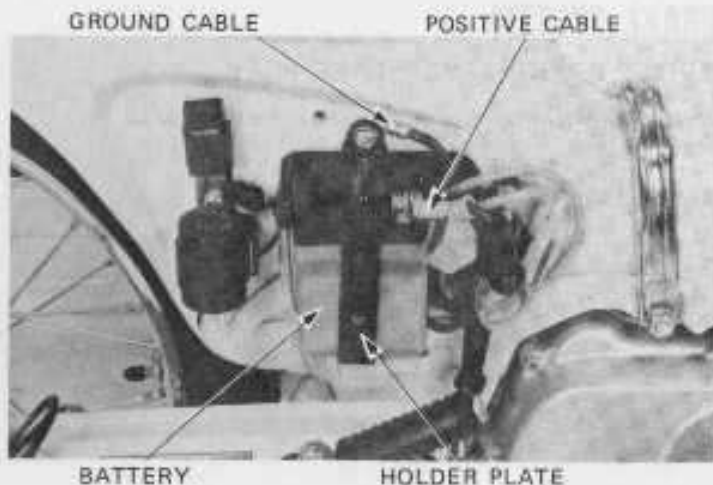

BRAKE SHOE WEAR

Replace the brake shoes if the arrow on the indicator plate aligns with the "Δ" mark on the brake panel when the brake is applied.

