





BATTERY

REMOVAL

Remove the frame right side cover.
 Disconnect the negative cable at the battery.
 Remove the three battery holder bolts, disconnect the battery breather tube at the battery and pull the battery out.

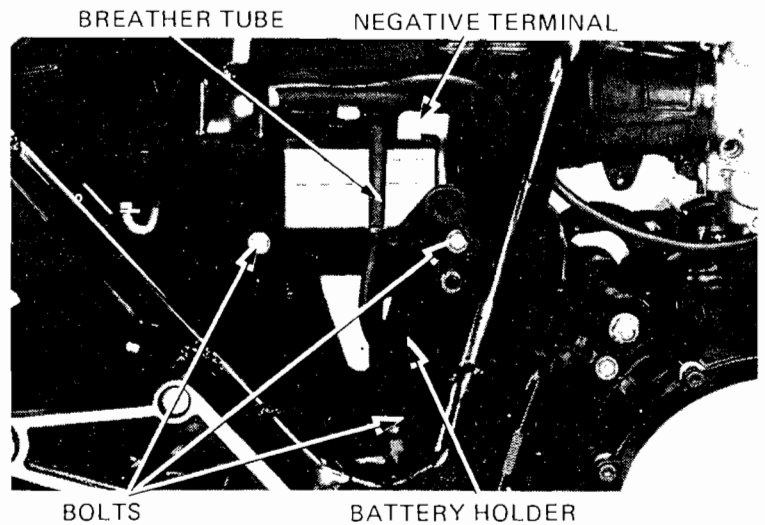

Disconnect the positive cable at the battery and remove the battery.

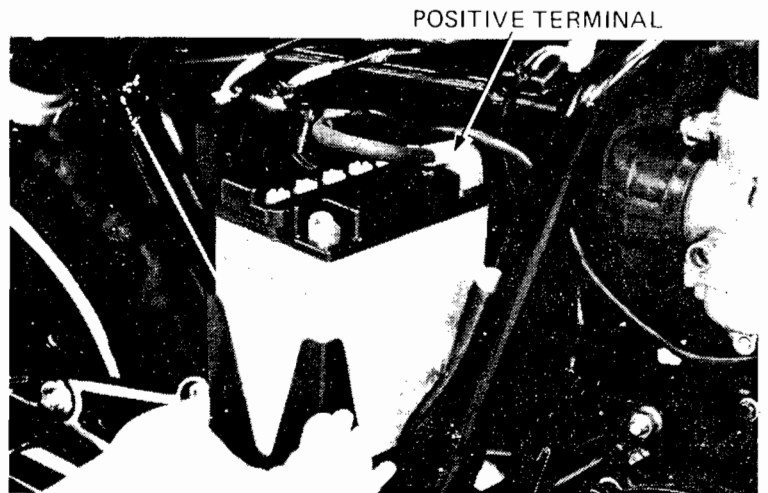

TESTING SPECIFIC GRAVITY

Test each cell with a hydrometer.

SPECIFIC GRAVITY:
(20°C, 68°F)

1.270 – 1.290	Fully charged
Below 1.260	Undercharged

NOTE

The battery must be recharged if the specific gravity is below 1.230.

The specific gravity varies with the temperature as shown in the accompanying table.

Replace the battery if sulfation is evident or if the space below the cell plates is filled with sediment.

WARNING

*The battery contains sulfuric acid. Avoid contact with skin, eyes, or clothing.
 Antidote: Flush with water and get prompt medical attention.*

