

THERMOSTATIC SWITCH

Inspect the switch for damage.

Suspend the switch in a pan of oil and check the temperatures at which the switch opens and closes.


Do not let the thermometer or switch touch the pan, or false readings will result.

WARNING

Wear gloves and eye protection.

NOTE

Oil must be used as the heated liquid to check operation above 100°C (212°F).

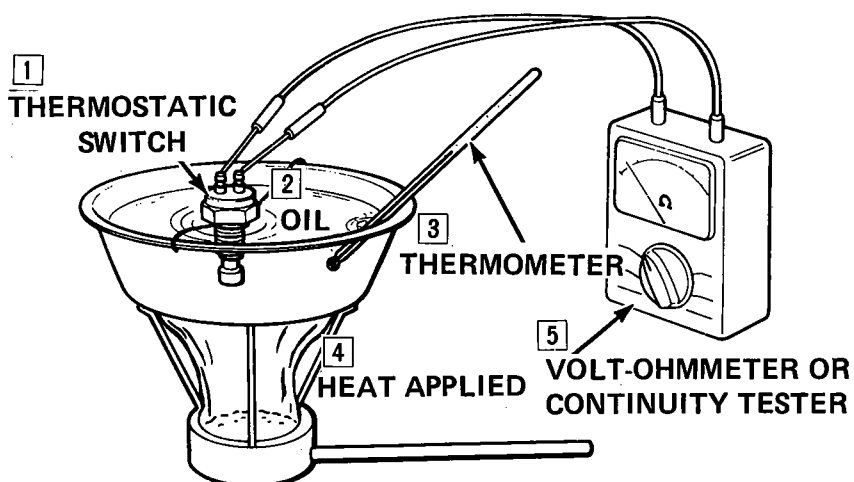

SWITCH OPEN (NO CONTINUITY) ... 95–99°C (203–210°F)
SWITCH CLOSED (CONTINUITY) ... 90–94°C (194–201°F)