



SHOCK ABSORBER


REMOVAL

NOTE

Remove one shock absorber at a time to facilitate removal and installation.


Remove the seat.

Remove the four handrail mounting bolts and the handrail.

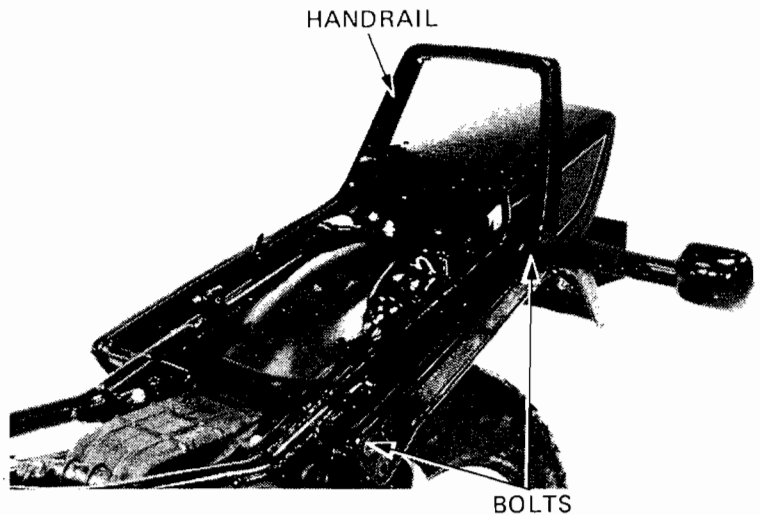

Remove the shock absorber upper and lower mounts.

Remove the shock absorber.

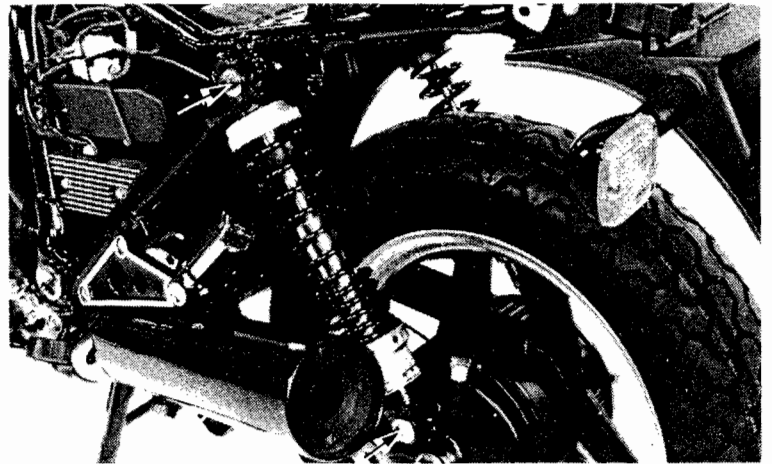

DISASSEMBLY

Replace base of shock compressor, 07959-3290001 with 07959-MB10000. Be sure to replace the spring compressor guides with the ones supplied with 07959-MB10000.

Install the attachment onto the spring.

Set the shock in the compressor as shown and compress the spring 30 mm by turning the compressor handle.

