


## FRAME

### 1. FRONT SUSPENSION

When assembling the front cushion, particular attention should be given to the following items.

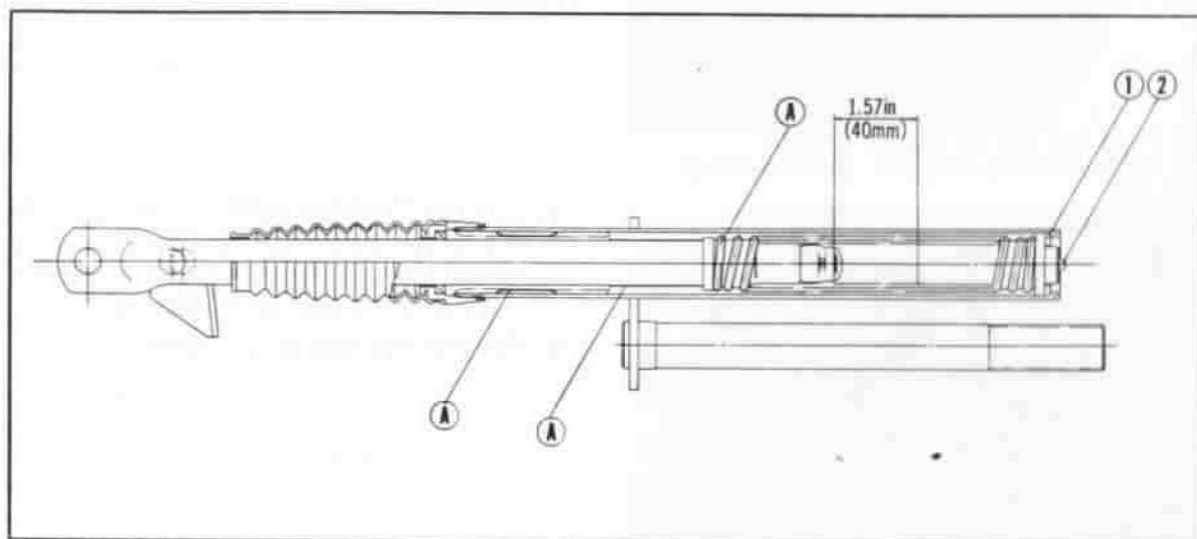

① Spring seat washer ② Dowel pin  
Fig. 54

1. Apply ample amount of good quality grease to the area **A** indicated by heavy lines in Fig. 54 when installing the front fork cushion assembly to the front fork.
2. Do not forget to install the seat washer **1**.
3. Positively insert the alignment dowel pin **2** of the front fork cushion into the steering handle holder before tightening the bolts.

### 2. REAR BRAKE (U.S.A. Type)

#### A. Description

The rear brake is operated by the right foot pedal or the left hand lever.

#### B. Disassembly

1. Remove the brake rod adjusting nut and separate the brake rod **B** from the brake lever (Fig. 55).



① Brake rod adjusting nut ② Brake rod **B**  
Fig. 55