



9. REAR SUSPENSION

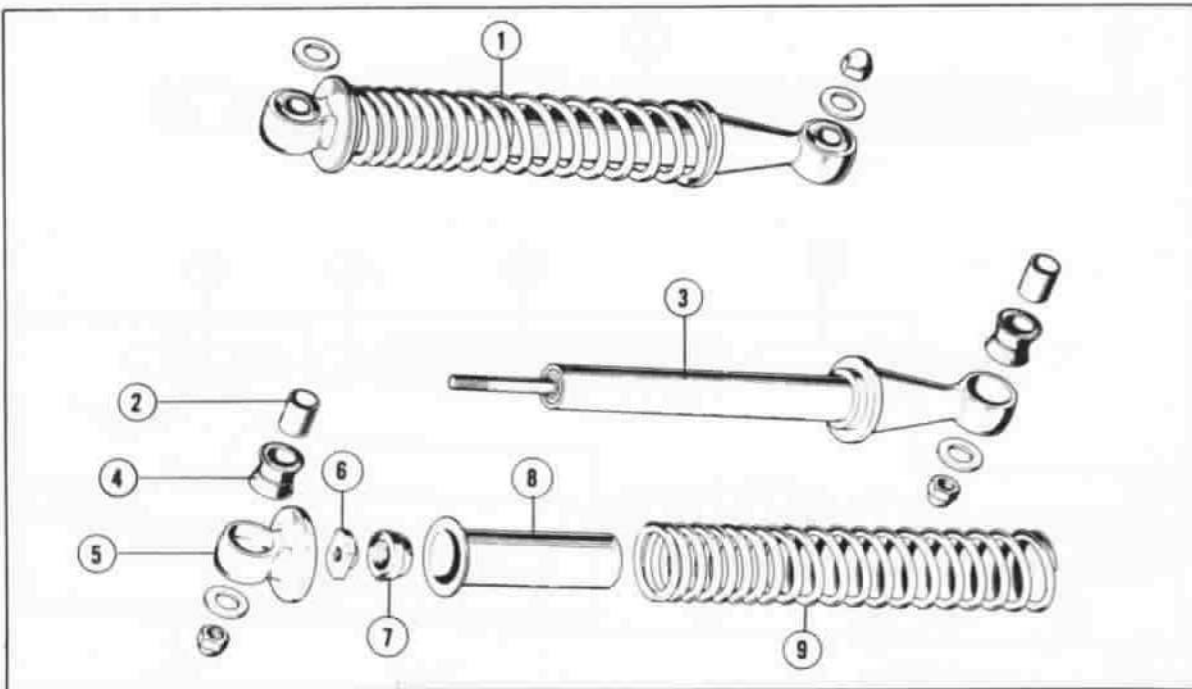

- ① Rear shock absorber assy.
- ② Rear cushion rubber collar
- ③ Rear damper
- ④ Rear cushion rubber brush
- ⑤ Rear cushion upper metal
- ⑥ Rear cushion upper lock nut
- ⑦ Rear cushion stopper rubber
- ⑧ Rear cushion spring guide
- ⑨ Rear cushion spring

Fig. 43

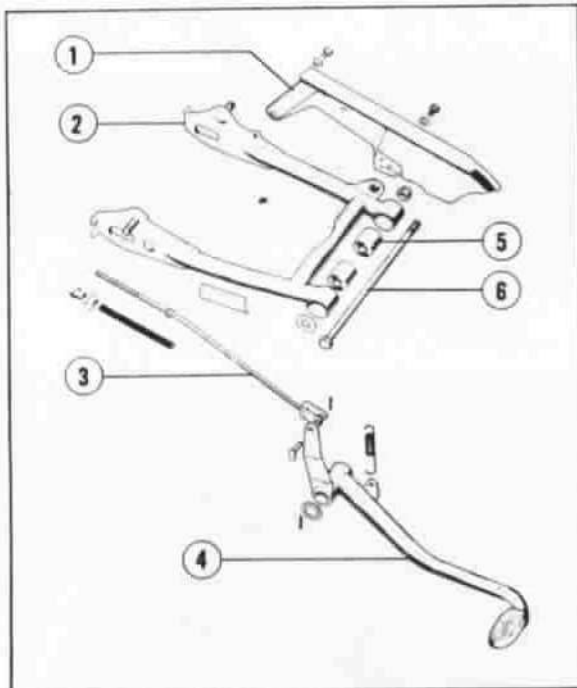


- ① Drive chain case
- ② Rear fork
- ③ Rear brake rod
- ④ Rear brake pedal
- ⑤ Rear fork pivot rubber bush
- ⑥ Rear fork pivot bolt

Fig. 44

A. Disassembly

1. Remove the rear wheel. (See Section 6-A.)
2. Remove the chain cover.
3. Remove the rear shock absorber attaching cap nuts and remove the rear shock absorber assemblies from the frame and rear fork.
4. Remove the brake pedal and brake rod.
5. Remove the pivot bolt and nut and remove the rear fork.

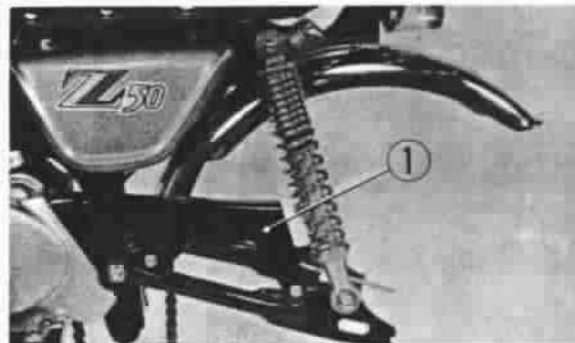

① Chain case cover
Fig. 45