

## Rear Suspension Spring Pre-load Adjustment

Refer to *Safety Precautions* on [page 118](#).


The spring pre-load adjuster knob has 35 spring pre-load positions (clicks) or more for different load or riding conditions.

To adjust the spring pre-load, turn the adjuster knob.

To adjust to the standard position:

1. Turn the spring pre-load adjuster knob counterclockwise until it will no longer turn (lightly seats).  
This is the full LOW setting.
2. Turn the adjuster clockwise for 1 click. This is the standard position.

LEFT SIDE

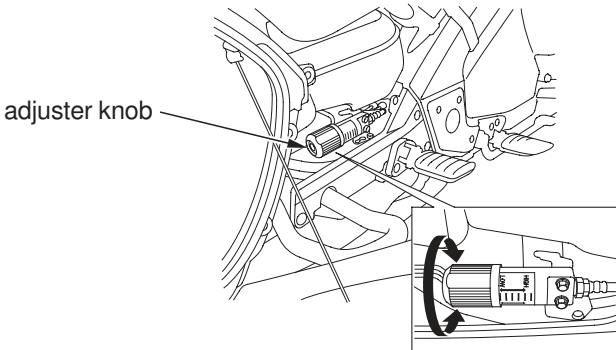

*To Reduce Spring Pre-load (LOW):*

For a light load and smooth road conditions, turn the adjuster counterclockwise toward LOW.

*To Increase Spring Pre-load (HIGH):*

For a firmer ride and rough road conditions, turn the adjuster clockwise toward HIGH.