

FRONT WHEEL BRAKE/SUSPENSION/STEERING



HONDA
XR500R

Insert the axle shaft through the wheel hub from the right side.

NOTE

The tang on the fork leg should be located in the slot in the brake panel.




Tighten the axle shaft.

**TORQUE: 50 – 80 N·m (5.0–8.0 kg-m,
36–58 ft-lbs)**

Connect the front brake cable.

Adjust the front brake free play (Page 3-15).

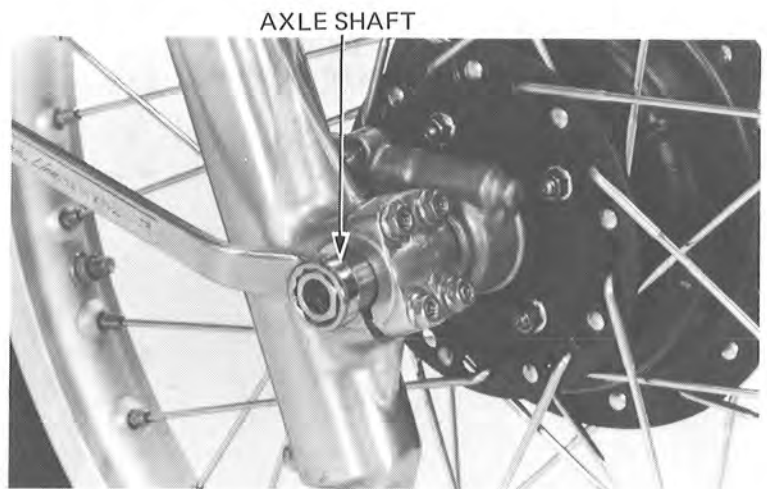

With the front brake applied, pump the front forks up and down several times to check for proper operation.

